


Quick Start Guide

1 Charge

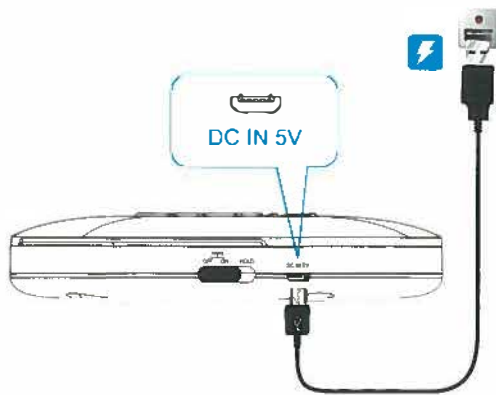


Charging(red)





Completed(green)


Notice: When the battery is less than 2%, a low battery warning icon will appear.

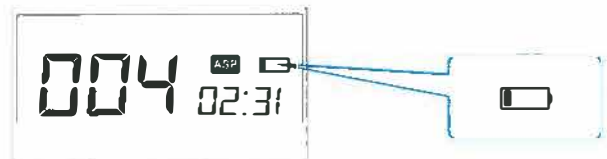


2 Power On

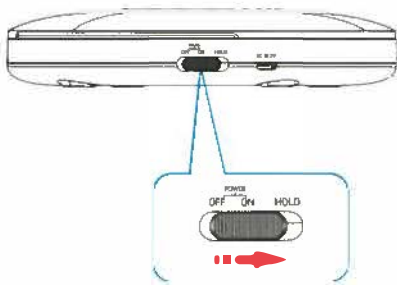

Push the power switch to ON position to turn on the player. The player will enter a standby mode after 30 seconds of no-operation, please press  restart it.

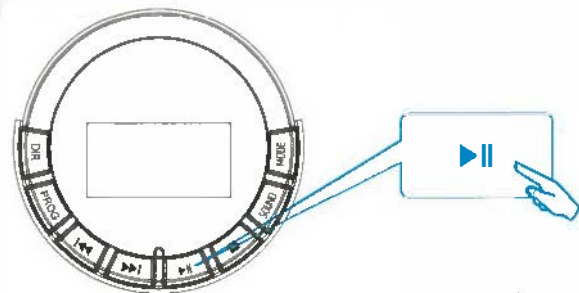

3 Play Disc

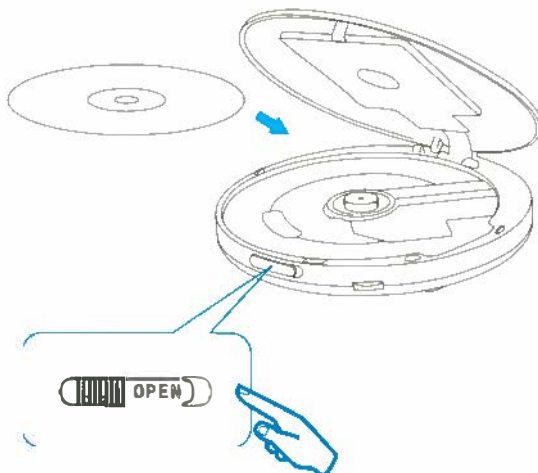


Notice: When the NOd is displayed on the screen:

- ① No disc: Please check if the disc is placed in the player;
- ② Wrong disc: Please check if the disc is CD (DVD/BD is not supported.).

4 Last Memory


The last memory function is turned on by default. Press and hold **PROG** to turn the last memory on or off. The ON or OFF will be displayed on the screen at this time.

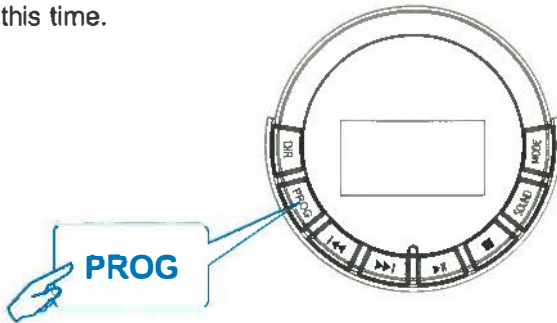

ON: After the player is turned off and restarted, it will return to the last stop-track on the disc.

OFF: After the player is turned off and restarted, it will start playing from the first track on the disc.

5 Button Functions

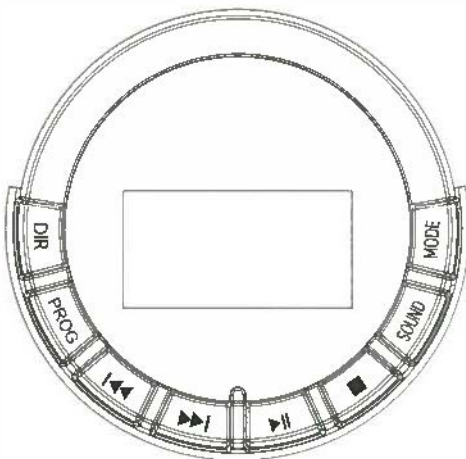

DIR : select next album in MP3 disc

PROG : customize the track catalog

◀◀ : Previous/ Fast rewind

▶▶ : Next/ Fast Forward


▶| : Play/Pause (it will resume playing form the last stop track by pressing PLAY/PAUSE)

■ : Stop (It will start playing from the first track by pressing STOP)

SOUND : BBS, POP, JAZZ, ROCK, CLASSIC

MODE : REP1, ALL, SHUF, INTRO

6 Support Links(YouTube)

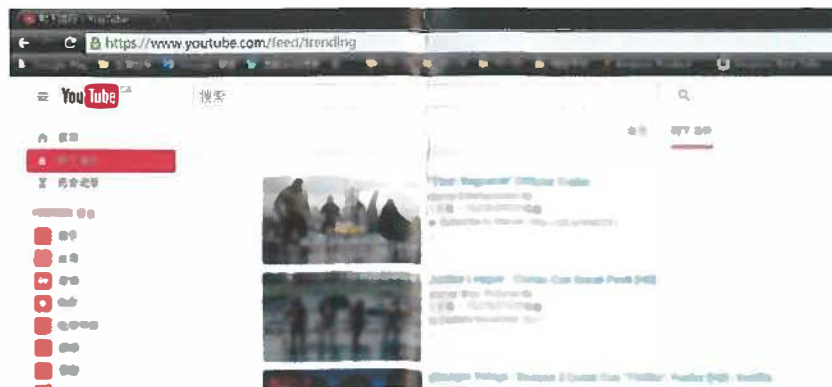

Please enter "PC001B" to search for the operation video of this machine.