

FANGOR

F-BR101

PORTABLE BLU-RAY DISC/DVD PLAYER USER MANUAL



Table of Contents

Safety and Maintenance	2
Security Instructions	2
Package Listing	3
Functional Overview	4
Remote Control	5
Quick Starting Guide	6
Connect to the HDMI	7
Play Video	7
Play a Blu-ray Video Disc	8
General Settings	9
Basic Operation for the Menu	9
System	9
Language	9
Playback	10
Security	10
Network	10
Display Settings	10
TV	10
Video processing	10
Specifications	12
Troubleshooting	13
Warranty	14

Safety and Maintenance

 This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

 This symbol indicates important instructions accompanying product.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the appliance.

Security Instructions

Read all of the instruction before using this Blu-ray player and keep this manual in a safe place for future reference.

1. Read and keep these instructions.
2. Heed all warnings and follow all instructions.
3. Do not use this player near water.
4. Clean only with dry cloth.
5. Do not block any ventilation openings and install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, or the player (including amplifiers) that produce heat.
7. Protect the power cord from being walked on or pinched particularly near the convenience receptacles, and the point where they exit from the player.
8. Use only with the cart, stand, tripod, bracket, table specified by the manufacturer or sold with the player. When a cart is used, use caution when moving the cart/player combination to avoid injury from tip-over.
9. Unplug this player during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel.

Servicing is required when the player has been damaged in any way, such as the power-supply cord or plug being damaged, liquid has been spilled or objects have fallen into the player, the player has been exposed to rain or moisture, does not operate normally, or has been dropped.

11. Please keep the unit in an environment with good ventilation.
12. **WARNING:** To reduce the risk of the fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the player.
13. **WARNING:** Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
14. Do not expose the batteries to excessive heat such as fire direct sunshine or similar sources.



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



 
CAUTION: This product utilizes a laser.

 Do not open cover and do not repair yourself. Refer servicing to qualified personnel.


Package Listing

Portable Blu-ray DISC/DVD player	x1
AC Power Adapter	x1
Car Charger	x1
USB Cable	x1
Remote Control	x1
User Manual	x1

FUNCTIONAL OVERVIEW

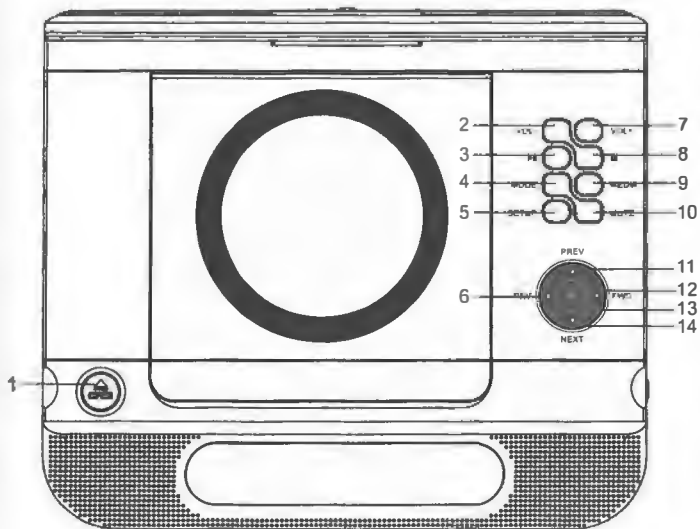

- 1.OPEN
- 2.VOL-
- 3.▶|| PLAY/PAUSE
- 4.MODE
- 5.SETUP
- 6.REV
- 7.VOL+
- 8.■ STOP
- 9.MEDIA
- 10.MUTE
- 11.PREV
- 12.FWD
- 13.OK
- 14.NEXT

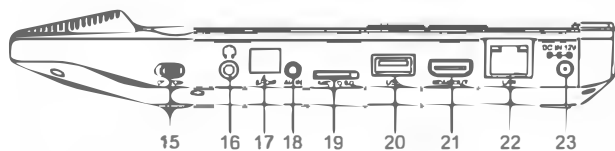 

- 15.OFF/ON
- 16.EARPHONE
- 17.SP/DIF
- 18.AV IN
- 19.MICRO SD
- 20.USB
- 21.HDMI OUT
- 22.LAN
- 23.DC IN 12V

Remote Control

(1) OSC: To access On Screen Control Menu.
(2) MODE: Switch between DVD and AV IN
(3) RESOLUTION: Press to change the resolution mode of the player.

(4) REPEAT: The specific repeat mode is different according disc type.

DVD: RepeatCH>RepeatTT>RepeatAll>Repeat Off.

CD/VCD: Repeat track>Repeat all> Repeat Off.

Playlist: Repeat file>Repeat playlist>Repeat Off.

(5) MEDIA CENTER: To turn on/off Media center.

(6) VOL-: Decreases volume.

(7) UP: Navigates through the Menus.

(8) TOP MENU: To open the Top menu of BD/DVD video disc.

(9) OK: Confirms an entry or selection.

(10) LEFT: Navigates through the Menus.

(11) SETUP: Access the SETUP menu.

(12) NUMBERS: For direct channel access.

(13) MARK VIEW: View bookmarks of the currently playing disc

(14) PROG: Edit the program and play.

(15) SUBTITLE: Select a subtitle language on a disc.

(16) AUDIO: Select an audio language.

(17) FAST FORWARD: Search forward.

(18) FAST REVERSE: Search backward.

(19) ANGLE: Playback a scene recorded with multiple angles. (The angle function will not work on DVD video discs that does not contains recorded with multiple angles.)

(20) MUTE: To mute the sound and press again to restore.

(21) DISPLAY the current status or the disc information.

(22) VOL+: Increases volume.

(23) TITLE: To open the Title menu of a disc. POPUP: Shows and hides popup menu.

(24) RIGHT: Navigates through the Menus.

(25) RETURN: Return to a previous display menu. 5

(26) DOWN: Navigates through the Menus.

(27) CLEAR: To clear an entry.

(28) GOTO: Jump to a user specified time during playback.

(29) MARK SET: Set bookmarks of the currently playing disc.

 
(30) ZOOM: To zoom it or zoom out.

(31) STOP: Stop play.

(32) PLAY/PAUSE: Start (resume) / pause play.


(33) PREV: Skip to the previous title, chapter or track.

(34) NEXT: Skip to the next title, chapter or track.

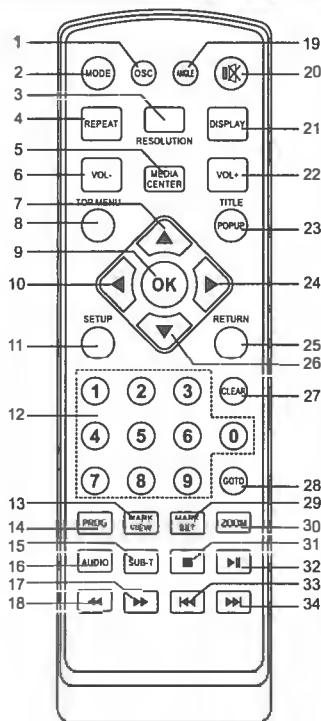

Operating with the remote control

 1. The remote control must point at the remote sensor, in order for the DVD player to function correctly.
2. The remote works best at a distance less than 5 meters and at an angle of up to $\pm 30^\circ$ toward the front of the unit.
3. Obstacles should not remain in between the remote control and the remote sensor on the main unit.

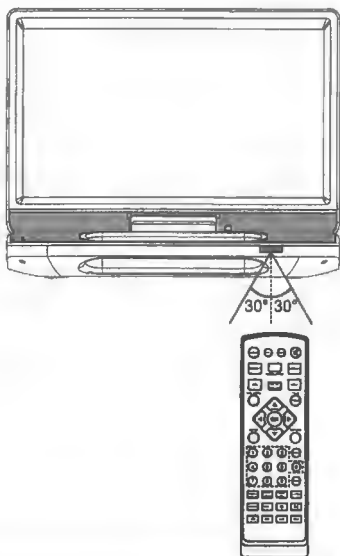

Quick Starting Guide

1. Connecting to an External Power Source

Connect the power adapter (supplied with the player) to the side input plug and to a wall outlet. Do not use any other device otherwise specified by your dealer.

2. Open the screen panel.

The screen panel of the portable DVD opens to a maximum 180° . And it can rotate 270° .

3. Press the bottom left corner button to open the disc cover.

4. Insert a Blu-ray disc/DVD with label side facing upward.

Align the center of the DVD disc with the center of the disc guide. Press gently down on the DVD to snap the disc into place, and then close the disc cover.

5. Slide the power switch on the right side of the unit to power it on.

6. Press the **▶||** or **OK** button on the unit to start playback.

In most cases, when you leave by the **▶||** button, continue to be used by **▶||** or **OK** button.

The DVD player will immediately start rendering the DVD program.

When you want to stop, press the **■** button, it will return to the power-on logo.

Connect to the HDMI

Connect the HDMI cable to the HDMI jack on this product and to the HDMI input jack on the TV.

Please change the resolution to 1080P for the best image effect.

Please set the resolution to 720P for the best image effect of the screen after you finished using the HDMI jack.

Tip:

- You can optimize the video output by pressing the Resolution button repeatedly from the remote to select the best resolution the TV can support.
- This type of connection provides best picture quality.

Play Video

Control Video Play

1. Play a title
2. Use the remote to control the play back

Buttons	Action
▶	Start or resume play / Pause play.
■	Stop play.
◀▶	Skip to a previous/next title or chapter.
◀▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.

Note:

For BD disc with Java application, the resume function is not available.

Display Menu

BD-video Disc:

TOP MENU: Stops the video playing and returns to the disc menu. This feature is disc-dependent.

POPUP: will access the BD-video disc menu without interrupting disc play.

DVD-video disc:

TOP MENU will display the root menu of a disc.

DISPLAY will display disc information and guide you through the available functions on the disc.


Change Video Play

Button	Action
Audio	Selects an audio language
SUBTITLE	Selects a subtitle language on a disc
REPEAT	Select or turn off repeat mode. Repeat options may vary from the disc type
DISPLAY	Display the current status or disc information
ZOOM	Zoom in/out of the video image
BOOK MARK SET	Set bookmarks of the currently playing disc
BOOK MARK VIEW	View bookmarks of the currently playing disc
PROGRAM	Edit the program and play
GOTO	Jump to a user specified time during playback
OSC	Access options relating to the current activity or selection, and control the video playback

Play a Blu-ray Video Disc

Blu-ray video discs have larger capacity and support features such as high-definition video, multichannel surround sound, Interactive menus and so on.

 1. Insert a BD-video disc.
2. Playback will automatically start, or select a play option in the menu and press ► button.
3. During playback, you can press **TOP MENU** to display additional information, features or content store on the disc.
4. During playback, you can press **POPUP** to display the disc menu without interrupting disc play.
5. During playback, press the **[OSC]** button on the RMC - the ON SCREEN MENU will be displayed.(As shown in the picture below)

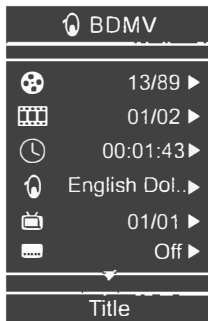

General Settings

Basic Operation for the Menu

1. Press **■** button, it will return to the power-on picture.
2. Press **SETUP**, the **SETUP MENU** display on the screen.
3. Select a main menu by **◀/▶** .
4. Select the menu you want by **▲/▼** buttons and press **▶** to enter.
You can press **▲** to return to the main menu.
5. Select the option by **▲/▼** and press **▶** .
You can press **◀** to return to the previous menu.
6. Select by **▲/▼** buttons and press **OK** to confirm.
You can press **◀** to return to the previous menu.
7. To return to the main menu from any submenu, press **RETURN**.
8. To exit the menu, press **SETUP**.

Note: Part of button functions need to use the remote control to finish.

System

1. Screen Saver: Turns the screen saver on/off. The screen saver will display in 3 minutes if there is no operation when the unit is turned on.
 2. Disc Auto Playback: Turns the disc auto playback function on/off.
 3. Disc Auto Upgrade: Turns the Disc Auto Upgrade function on/off.
 4. Load Default: Return the player to its default settings.
 5. Upgrade: select this when you want to upgrade your player software to the latest version.
 6. BUDA: BUDA Information
- * Notice : BUDA does not support the NTFS file system

Language

Player Menu: Selects the Player Menu language.

Disc Menu: Selects the menu language of the disc.

Playback

1. Last Memory: Turn on/off the last memory function
2. Audio Mark: Turn on/off Secondary Audio mark function.

Security

1. Change Password: Changes the password for parental control menu.
2. Parental Control: to set the parental control.
3. Country Code: Select the Country code.

Note: The original code is 0000. The code can be changed by user.

Network

- Connect this product to a broadband MODEM or router.
- This player will start to detect if there is a connection to the network.
- If the connection test fails, select (Retry) and press OK to try and re-connect to the network again.

1. Internet Connection: Displays the Internet connection state.
2. Information: Displays information of the current Network.
3. Connection Test: Tests the Internet connection state.
4. IP Setting: Sets the IP for the player.
5. BD-Live Connection: Connection situation of BD-Live.
6. Proxy Setting: Setup Proxy Server.

 
TV

1. TV Screen: Selects the display mode for the TV.
2. Resolution: Selects the resolution for the TV.
Resolution Output: Auto, 480P, 720P, 1080I, 1080P.
3. Audio Output: Bitstream, PCM, Reencode.

Display Settings

Video Processing

1. Video Adjust: Enter the submenu to adjust the video display.
2. Sharpness: Select the playback sharpness mode.

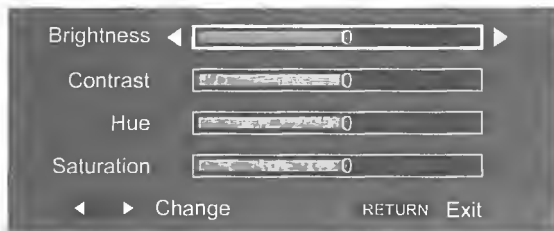

Adjust the Brightness, Contrast, Hue, Saturation of the screen to suit.

Note:

To prevent possible damage of this product do not turn off the power or remove the USB flash drive while the software update is in progress.

Caution

Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs to clean the player.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation."

- "Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."
- "NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help." Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Specifications

Playback Disc Formats	BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW
Video Formats	H.264/VC1/MPEG-1/MPEG-2/MPEG-4/WMV
Audio Formats	Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, WMA
Photos	JPEG, PNG, GIF
Accessories Supplied	<ul style="list-style-type: none">• Remote control• Power adapter• Car Charger• USB cable• User manual
Video	<ul style="list-style-type: none">• Signal system: PAL / NTSC• HDMI video output: Auto, 480P, 720P, 1080i, 1080P
Audio	3 types output: Bitstream PCM Reencode
USB	As additional USB memory for software updates are storing BD-Live bonus contents.
LED Indicator	Power on: FANGOR BLU-RAY DISC/DVD PLAYER Charge: Red color during charging. The red LED will be off when fully charging.

Troubleshooting

WARNING: Before requesting after service please check this possible resolution. Risk of electric shock. Never remove the casing of the product. To keep the warranty valid, never try to repair the product yourself.

No reaction to the remote control	<ul style="list-style-type: none">• Make sure the player is connected to a power outlet.• Insert the batteries correctly.• Point the remote control at the IR sensor located on the front panel of this product.• If the remote still does not function, try putting new batteries into the remote control.
No picture/sound	<ul style="list-style-type: none">• Make sure the connection is in good condition; volume is not too low; audio receiver or TV work normally; audio setting is proper.
No picture on HDMI connection	<ul style="list-style-type: none">• If this player is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be displayed• Check if the HDMI cable is faulty. If faulty or damaged, replace the HDMI cable.• If this happens when you change the [resolution] setting, press Resolution on the remote control repeatedly until the picture appears.
High-definition video signal not playing on the TV	<ul style="list-style-type: none">• Ensure that the audio cables are connected to the audio input of the TV• Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.
No sound on HDMI connection	<ul style="list-style-type: none">• You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DIVI compatible.
Disc cannot be played	<ul style="list-style-type: none">• Ensure that the disc is loaded properly• Ensure that this player supports the disc. See Specifications.• Ensure that this player supports the region code of the DVD or BD.• For DVD+RW, ensure that the disc is finalized.• Clean the disc.

Data Files cannot be played or read	<ul style="list-style-type: none">• Ensure that the data file was recorded in the standard UDF, ISO9660 or JOLIET format.• Ensure that the JPEG file extension .jpg, JPG, jpeg or JPEG.
Not entry sign appears on the TV	<ul style="list-style-type: none">• The requested operation is not possible.

Warranty

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at:

FANGOR-BR101@hotmail.com

We will offer solutions to your issues or a direct replacement/refund without delays.

FANGOR

PORTABLE BLU-RAY DISC/DVD PLAYER

USER MANUAL

F-BR101